


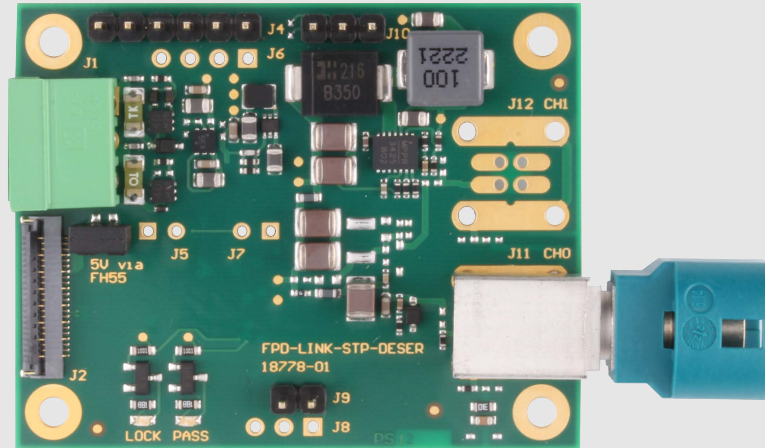

ALVIUM FPD-LINK III STP CAMERAS

Deserializer Board FPD-Link III STP to CSI-2

User Guide

V1.0.4

**Quick links**

- [This document at a glance](#) on page 15
- [Contact us](#) on page 17
- [Contents](#) on page 18

Read before use

EN - English

Safety

Before using the product, read these safety instructions. Observe the warnings at all times. Use the product only as stated in the [Intended use](#) on page 24.

**CAUTION****Risk of burns**

The product in operation can reach temperature levels which could cause burns.

**CAUTION****Risk of cuts by sharp edges**

The product can have sharp edges.

Intended use

Intended use of Allied Vision product is the integration into vision systems by professionals. All Allied Vision product is sold in a B2B setting.

DA - Dansk

Sikkerhed

Læs sikkerhedsanvisningerne, før produkt bruges. Overhold alle advarsler. Brug kun produkt som anført i [Intended use](#) på side 24.



FORSIGTIG

Forbrændingsfare

Når produkt bruges, kan det blive meget varmt og forårsage forbrændinger.



FORSIGTIG

Fare for skarpe kanter

Produktet kan have skarpe kanter.

Tilsigtet brug

Allied Vision produktets tilsigtede brug er en indbygning i et visionssystem, udført af fagfolk. Alle Allied Vision produkter sælges i B2B.

DE - Deutsch

Sicherheit

Bevor Sie das Produkt benutzen, lesen Sie diese Sicherheitshinweise. Beachten Sie diese Hinweise immer. Verwenden Sie das Produkt nur wie beschrieben in [Intended use](#) auf Seite 24.



VORSICHT

Gefahr von Verbrennungen

Im Betrieb kann das Produkt Temperaturen erreichen, die zu Verbrennungen führen.



VORSICHT

Schnitte durch scharfe Kanten

Das Produkt kann scharfe Kanten haben.

Bestimmungsgemäßer Gebrauch

Allied Vision Produkte sind bestimmt für die Integration in Bildverarbeitungssysteme durch Fachpersonal. Alle Allied Vision Produkte werden in einer B2B-Umgebung verkauft.

ES - Español

Seguridad

Antes de utilizar el producto lea estas instrucciones de seguridad. Observe las advertencias en todo momento. Utilice el producto solo tal y como se estipula en el [Intended use](#) en la página 24.



ATENCIÓN

Riesgo de quemaduras

El producto en funcionamiento puede alcanzar temperaturas que podrían provocar quemaduras.



ATENCIÓN

Riesgo de cortes por bordes afilados

El producto puede tener bordes afilados.

Uso previsto

El uso previsto del producto Allied Vision es la integración en el sistema de visión por parte de profesionales. Todos los productos Allied Vision se venden dentro de una relación B2B.

FI - Suomi

Turvallisuus

Lue nämä turvallisuusohjeet ennen tuotteen käyttöä. Noudata tuotetta joka hetki. Käytä tuotteen ainoastaan kohdassa [Intended use](#) sivulla 24 kuvatulla tavalla.



HUOMIO

Palovammojen vaara

Käytössä olevan tuotteen saavuttamat lämpötilatasot voivat aiheuttaa palovammoja.



HUOMIO

Terävien reunojen aiheuttama viiltovaara

Tuotteessa voi olla teräviä reunoja.

Käyttötarkoitus

Allied Vision-tuotteen käyttötarkoitus on integrointi kuvajärjestelmiin ammattilaisten toimesta. Kaikki Allied Vision-tuotteet myydään B2B-ympäristössä.

FR - Français

Sécurité

Veuillez lire ces consignes de sécurité avant d'utiliser le produit. Respectez continuellement les avertissements. Utilisez le produit uniquement comme indiqué sous [Intended use](#), page 24.



ATTENTION

Risque de brûlures

Le produit en service peut atteindre des niveaux de température susceptibles d'entraîner des brûlures.



ATTENTION

Risque de coupures sur des bords tranchants

Le produit peut présenter des bords tranchants.

Utilisation prévue

L'utilisation prévue du produit Allied Vision est son intégration dans des systèmes de vision par le soin de professionnels. Tout produit Allied Vision est vendu dans un cadre B2B.

עברית - HE

בטיחות

לפני השימוש במוצר, עליך לקרוא את הוראות הביטחון האלו. עליך לממש הוראות ביטחון אלו תמיד. השימוש במצלמה הוא רק לפי מה שכתוב ב"כוונת השימוש" (*Intended use* בעמוד 24).

זהירות

סכנת כווייה

בזמן הפעלת המוצר עלולות לעלות טמפרטורות גבוהות, שיכולות לגרום לכוויות.



זהירות

סכנת חתכים על ידי קצוות חדים

למוצר יכולים להיות קצוות חדים.



שימוש מיועד

מוצרי AlliedVision מיועדים לשילוב במערכות ממוחשבת לעיבוד צילומים ע"י אנשי מקצוע. כל מוצרי AlliedVision נמכרים לשימוש בסביבת B2B.

IT - Italiano

Sicurezza

Leggere queste istruzioni per la sicurezza prima di utilizzare il prodotto. Osservare sempre tutte le avvertenze. Utilizzare il prodotto come descritto alla sezione [Intended use](#) a pagina 24.



ATTENZIONE

Pericolo di ustioni

Durante il funzionamento, il prodotto può raggiungere temperature elevate che possono essere causa di ustioni.



ATTENZIONE

Pericolo di tagliarsi sui bordi affilati

I bordi del prodotto lente possono essere affilati.

Uso previsto

Il prodotto Allied Vision è concepito per essere integrato in sistemi di monitoraggio in campo professionale. Tutti i prodotti Allied Vision sono venduti in uno scenario B2B.

JA – 日本語

安全性

本製品を使用する前に、この安全ガイドをお読みください。警告を必ず守ってください。必ず21ページの[Intended use](#) 24 ページに従って使用してください。



注意

やけどの危険性

作動中のカメラは、やけどを引き起こす温度まで熱くなる恐れがあります。



注意

な端部で切り傷の危険性

本製品には鋭利な部分がある場合があります。

用途

Allied Vision製品は、専門家が視覚装置に統合することを意図したものです。すべてのAllied Vision製品は、企業間取り引き用に販売されています。

NL - Nederlands

Veiligheid

Lees deze veiligheidsinstructies voordat u het product gebruikt. Neem deze waarschuwingen altijd in acht. Gebruik het product uitsluitend, zoals aangegeven in het [Intended use](#) op pagina 24.



VOORZICHTIG

Risico van verbranding

Het gebruikte product, kan temperatuurwaarden bereiken die brandwonden kunnen veroorzaken.



VOORZICHTIG

Risico van snijwonden door scherpe randen

Het product kan scherpe randen hebben.

Beoogd gebruik

Het beoogde gebruik van het Allied Vision-product is de integratie in optische systemen door professionals. Alle Allied Vision-producten worden verkocht in de B2B-markt.

NO - Norsk

Sikkerhet

Les disse sikkerhetsinstruksene før du bruker produkt. Følg advarslene til en hver tid. Bruk kun produkt i samsvar med [Intended use](#) på side 24.



FORSIKTIG

Risiko for brannskader

Produktet i bruk kan nå temperaturnivåer som kan forårsake brannskader.



FORSIKTIG

Risiko for kutt fra skarpe kanter

Produktet kan ha skarpe kanter.

Tiltenkt bruk

Den tiltenkte bruken av Allied Vision-produktet er integrering i visjonssystemer av profesjonelle. Alle Allied Vision-produkter selges i en forretning til forretning-situasjon.

SV - Svenska

Säkerhet

Läs igenom säkerhetsinstruktionerna innan du använder produkten. Var hela tiden särskilt uppmärksam på varningarna. Använd enbart produkten på det sätt som anges i [Intended use](#) på sida 24.



VARNING

Risk för brännskada

Produkten i drift kan komma upp i temperaturer som kan orsaka brännskador.



VARNING

Risk för skärsår från vassa kanter

Produkten kan ha vassa kanter.

Avsedd användning

Den avsedda användningen av Allied Vision-produkter är integrering i visionssystem av fackmän. Samtliga Allied Vision-produkter säljs i en B2B-miljö.

ZH - 简体中文版

安全需知

在使用产品之前，请阅读这些安全说明。请务必遵守相关警告 和 [Intended use](#) 于第 24 页。



注意事项

烫伤风险

在产品运行过程中，温度可能会上升，导致烧伤的危险。



注意事项

锋利边缘割伤的风险

产品可能有锋利的边缘。

预期用途

Allied Vision 产品的预期用途是由专业人士整合到视觉系统中。所有 Allied Vision 的产品均通过 B2B 渠道销售。

This document at a glance



Get an overview of documentation for the Deserializer Board
FPD-Link III STP to CSI-2:

Note.....	16
Shipping contents.....	16
What else do you need?	16

Note



Read this document carefully

Learn to use deserializer boards in the most safe and efficient way and avoid damage to your embedded system.

Shipping contents

The delivery consists of

- Deserializer Board FPD-Link III STP to CSI-2
- 1 preassembled jumper for 5 VDC over FPC (default power mode)
- 1 jumper to enable 12 VDC over terminal connector..



Input power settings

See [Connecting power](#) on page 42 for jumpers and connections.



Cables are not included

MIPI CSI-2 FPC cables to connect to the host and to the deserializer board and HSD STP cables to connect the deserializer board to Alvium FP3 STP cameras are not included.

What else do you need?

This is a selection of helpful downloads:

Download	Link
Camera documentation for installation and operation: • Alvium FP3/GM2 User Guide • Alvium CSI-2 Cameras User Guide	www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation/
Accessories , such as HSD STP cables, FPC cables, I/O cables, lenses, and tripod adapters	www.alliedvision.com/en/products/accessories
SerDes Configurator: Please contact the Allied Vision Support team at...	www.alliedvision.com/en/about-us/contact-us/technical-support-repair-/rma

Table 1: Downloads for Deserializer Board FPD-Link III STP to CSI-2

Contact us

Website, email

General

www.alliedvision.com/en/contact

info@alliedvision.com

Distribution partners

www.alliedvision.com/en/avt-locations/avt-distributors

Support

www.alliedvision.com/en/support

www.alliedvision.com/en/about-us/contact-us/technical-support-repair/-/rma

Offices

Europe, Middle East, and Africa (Headquarters)

Allied Vision Technologies GmbH
Taschenweg 2a
07646 Stadtroda, Germany
T// +49 36428 677-0 (Reception)
T// +49 36428 677-230 (Sales)
F// +49 36428 677-28

North, Central, and South America, Canada

Allied Vision Technologies Canada Inc.
300 – 4621 Canada Way
Burnaby, BC V5G 4X8, Canada
T// +1 604 875 8855

USA

Allied Vision Technologies, Inc.
102 Pickering Way- Suite 502
Exton, PA 19341, USA
Toll-free// +1-877-USA-1394
T// +1 978 225 2030

Asia-Pacific

China

Allied Vision Technologies Shanghai Co Ltd.
B-510, Venture International Business Park
2679 Hechuan Road
Minhang District, Shanghai 201103
People's Republic of China
T// +86 21 64861133

Japan

Allied Vision Technologies
Yokohama Portside Bldg. 10F
8-1 Sakae-cho, Kanagawa-ku
Yokohama-shi, Kanagawa, 221-0052
T// +81 (0) 45 577 9527

Singapore

Allied Vision Technologies Asia Pte. Ltd
82 Playfair Rd, #07-01 D'Lithium
Singapore 368001
T// +65 6634 9027

Contents

Read before use	2
This document at a glance	15
Note	16
Shipping contents	16
What else do you need?	16
Contact us	17
Document history and conventions	20
Document history	21
Conventions used in this user guide	21
Typographical styles	21
Symbols and notes	21
Component naming	22
Compliance, safety, and intended use	23
Compliance notifications	24
Intended use	24
Copyright and trademarks	24
Your safety	25
Handling hot deserializer boards	25
Sharp edges	25
Product safety	25
ESD	25
Electrical connections	25
Specifications	30
Specifications overview	31
PCB and PCBA number	32
Technical drawing	32
Electronic schematics	33
STP connector pin assignment	35
Setting up deserializer boards	36
Connecting HSD STP cables	37
HSD STP cable-side connectors	37
Instructions for connecting	38

Instructions for disconnecting	38
Connecting FPC cables	39
Mounting deserializer boards	41
Connecting components to each other	41
Connecting power	42

Document history and conventions



This chapter includes:

Document history	21
Conventions used in this user guide.....	21
Component naming	22

Document history

Version	Date	Remarks
V1.0.4	2025-Sep-09	- Removed UKCA logo from Compliance notifications on page 24. - Improved readability for users with reduced color perception in Connecting power on page 42.
V1.0.3	2025-May-12	- Removed contents for ISO 13485 and updated definitions for Intended use on page 24. - Added adapter boards in Figure 1: Strain relief for all cable connections on page 26. - Applied editorial changes.
V1.0.2	2024-Jul-15	Updated addresses in Contact us on page 17.
V1.0.1	2024-Mar-26	- To warn against cuts to the skin added contents in: Read before use on page 2 Symbols and notes on page 21 Sharp edges on page 25. - Added icon for compliance with UKCA in Compliance notifications on page 24.
V1.0.0	2023-Aug-03	Release version

Table 2: Document history

Conventions used in this user guide

To give this user guide an easily understood layout and to emphasize important information, the following typographical styles and symbols are used:

Typographical styles

Style	Function
Emphasis	Highlighting important things
Web links and references	Links to webpages and internal cross references

Table 3: Typographical styles

Symbols and notes



CAUTION

Risk of burns

Precautions are described



CAUTION

Risk of cuts

Precautions are described



NOTICE

Material damage

Precautions are described.



Practical tip

Additional information helps to understand or ease handling the camera and components.



Additional information

Web link or reference to an external source with more information is shown.

Component naming

Components described in this user guide are not defined by common standards. Therefore, naming must be accurate to avoid misconceptions. Simplified terms are used in this document to avoid lengthy naming.

Short version used in this document	Long version
Adapter board	Example: Adapter Board for NVIDIA Jetson Nano and Jetson Xavier NX DevKit (adapts Alvium CSI-2 cameras and deserializer boards to NVIDIA Jetson Nano and Jetson Xavier NX DevKit)
Deserializer board	Deserializer Board FPD-Link III STP to CSI-2
Embedded board	Example: NVIDIA Jetson Xavier NX DevKit
FPC connector	Hirose FH55-22S-0.55SH FPC (flexible printed circuit) connector
FPC cable	MIPI CSI-2 FPC cable

Table 4: Component naming


Compliance, safety, and intended use



This chapter includes:

Compliance notifications	24
Intended use	24
Copyright and trademarks	24
Your safety	25
Product safety	25

Compliance notifications



National regulations on disposal must be followed.

Intended use

Allied Vision's objective is the development, design, production, maintenance, servicing and distribution of digital cameras and components for image processing. We are offering standard products as well as customized solutions.

Intended use of Allied Vision product is the integration into Vision systems by professionals. All Allied Vision product is sold in a B2B setting.

Unless expressly agreed otherwise, we design, manufacture, and supply in accordance with the standards of the machine vision industry.

In the event of requirements going beyond this, the customer must:

- Notify us of the special use for each model before the first order is placed so that the models in question can be separated out from the standard processes using their own part numbers, and
- Conclude a quality assurance agreement with us prior to purchasing, to define its requirements in a legally secure manner.

This may require a surcharge, as our prices are very tightly tailored to standard requirements.

Copyright and trademarks

All text, pictures, and graphics are protected by copyright and other laws protecting intellectual property. All content is subject to change without notice.

All trademarks, logos, and brands cited in this document are property and/or copyright material of their respective owners. Use of these trademarks, logos, and brands does not imply endorsement.

Copyright © 2025 Allied Vision Technologies GmbH. All rights reserved.

Your safety

This section informs about issues related to your personal safety. Descriptions explain how to avoid hazards and use deserializer boards safely.

Handling hot deserializer boards

Electrical components of deserializer boards get hot during operation.

Before operation, include deserializer boards in housings that disable any contact to hot components.

Sharp edges

The edges of PCBs (printed circuit boards) and the assembled components can be sharp. Be careful these edges do not cut your skin when handling deserializer boards.

Product safety

To prevent material damage, read the following to understand risks in using deserializer boards.

ESD

ESD is dangerous for electronic devices, especially when tools or hands get in contact with connectors and electronic components. We recommend measures to avoid damage by ESD:

- Unpacking: Remove the deserializer board from its anti-static packaging only when your body is grounded.
- Workplace: Use a static-safe workplace with static-dissipative mat and air ionization.
- Wrist strap: Wear a static-dissipative wrist strap to ground your body.
- Clothing: Wear ESD clothing. Keep components away from your body and clothing. Even if you are wearing a wrist strap, your body is grounded but your clothes are not.

Electrical connections

The standard for FPD-Link III does not specify electrical connections as extensively as the USB or GigE standard. Plug and play is not supported. Read specifications carefully.

Components can easily be damaged. If you are unfamiliar with FPD-Link III connections or with embedded systems, be extremely careful. Follow the instructions in the Alvium FP3/GM2 User Guide.

Allied Vision accessories help to avoid damage to the camera and connected components.



Compatible accessories

We recommend using accessories by Allied Vision, see www.alliedvision.com/en/products/accessories.

Strain relief for all cable connections

If HSD STP connectors are exposed to excessive stress, they can break off from devices. Hirose FH55 FPC connectors can be damaged easily.

Provide sufficient strain relief for all cable connections to avoid malfunctions and damage to electronics by wrong polarity and short circuits. To protect cameras and connected components, secure cables as shown in [Figure 1](#).

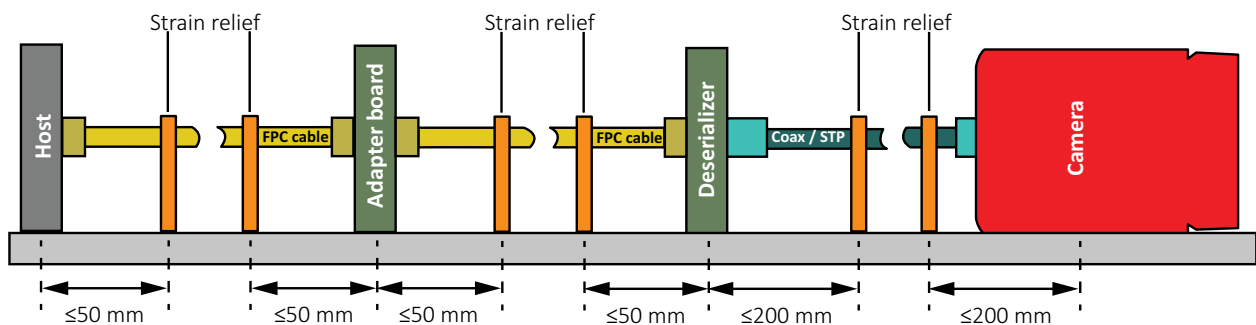


Figure 1: Strain relief for all cable connections

HSD STP connectors and cables

HSD STP connectors enable a robust connection. However, if the cable is overstressed, these connectors can break off from devices.

- Unlock the cable connector while you are disconnecting devices.
- Avoid stress to HSD STP connectors and cables.
- Observe the minimum bending radius for STP cables.
- Observe instructions for [Strain relief for all cable connections](#) above.
- Follow the instructions in [Connecting HSD STP cables](#) on page 37.



Figure 2: HSD STP connectors on devices (left) and on cables (right)

Pin assignment on STP cables

If Alvium FP3 STP cameras are operated with incompatible cables, cameras and connected peripherals can be damaged.

- We recommend you to use only STP cables by Allied Vision.
- If you want to use third party STP cables, observe [STP connector pin assignment](#) on page 35 for Alvium FP3 STP cameras.



Additional information

For technical data and more instructions on the HSD STP connector Code Z (water blue), see the manufacturer data sheet at www.rosenberger.com.

FPC connectors

Small-sized Hirose FH55-22S-0.55SH FPC connectors enable compact board design. Therefore, they are sensitive to mechanical stress. Especially if you are inexperienced with these, be very cautious. If FPC connectors are broken, the complete device must be replaced. Follow the instructions in [Connecting FPC cables](#) on page 39 carefully.

- Avoid stress to FPC connectors.
- Allow only the FPC cable to touch conductors.

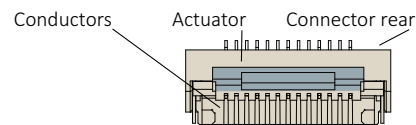


Figure 3: Hirose FH55-22S-0.55SH FPC connector

Mating and unmating cycles

FPC connectors are designed for one-time installation, with the opportunity for corrections. Therefore, these connectors are specified for **maximum 20** mating and unmating cycles.

Handling the actuator

- Move the actuator only as described in the instructions.
- Carefully flip the actuator at the middle with your finger nail as described in the instructions.
- Follow the instructions in [Connecting FPC cables](#) on page 39.



Additional information

For technical data and more instructions on the Hirose connectors, see www.hirose.com.

FPC cables

FPC cable position and orientation

Short circuits of FPC cables can damage the camera or connected hardware. Insert FPC cables into FPC connectors with cable guiding tabs matching the connector's side guides. See [Connecting FPC cables](#) on page 39.

FPC cables and stress

Over-stressed FPC cables can damage the camera and connected hardware. When connected devices are twisted against each other or pulled apart from each other with too much force, the FPC cable is over-stressed. Spring contacts of FPC connectors are worn out, causing short circuits and unreliable electrical connections.

- Allow only slight bending of the FPC cable (minimum bending radius: 10 mm).
- For strain relief, see [Strain relief for all cable connections](#) on page 26.

No hot-plugging for FPD-Link III

Alvium FP3 cameras do not support hot-plugging. Hot-plugging can destroy the camera and connected hardware by high inrush current.

Disconnect power supplies before connecting or disconnecting devices from each other.

Signal quality

Noise and electromagnetic interference can disable camera functions.

- Avoid squeezing cables and bending cables over edges.
- Avoid contact to metal surfaces, causing electromagnetic interference.
- Please use cables recommended by Allied Vision.

Camera power

Operating cameras beyond the specified range damages cameras. Cameras are powered using the HSD STP connector, using a limited power source (LPS), according to IEC 62368-1. For maximum power input, see your camera's specifications in the Alvium FP3/GM2 User Guide. The camera is not intended to be connected to a DC distribution network.

Only use power supplies that meet the insulation requirement according to PELV or SELV. For details, please refer to IEC 61140.

Use only power supplied via the deserializer board

Alvium FP3 cameras use the same 10-pin TFM connector as Alvium G1 and G5 cameras. But the 10-pin TFM connector on Alvium FP3 cameras must not be used as power input.

- Use the 10-pin TFM connector only as power output and for I/O control.

- Connect power as described in [Connecting power](#) on page 42.

Ground loops

Unsuitable connections can lead to different potentials between the camera system GND and the environmental shield/chassis GND caused by ground loops. This can damage the camera and the connected devices or cause malfunctions.

- Avoid potential differences between the camera housing and GND.
- All wiring must be done by authorized personnel, according to the corresponding technical standards.
- You may mount the camera electrically isolated.
- Read the Avoiding Ground Loops in Vision Systems application note.



More information

See the Avoiding Ground Loops in Vision Systems application note at www.alliedvision.com/en/support/technical-documentation/alvium-csi-2-documentation.

Specifications



This chapter includes:

Specifications overview.....	31
PCB and PCBA number.....	32
Technical drawing.....	32
Electronic schematics	33
STP connector pin assignment.....	35

Specifications overview

Feature	Specification
Product code	19502
PCB number	18778 (see PCB and PCBA number on page 32)
PCBA number	18779 (see PCB and PCBA number on page 32)
Connector to the host	Hirose FH55-22S-0.5SH FPC connector
Connector to the camera	HSD STP connector Code Z (water blue)
Connector to external power	3-pin Phoenix MC 1.5/3-G-3.5 terminal connector, matching cable connector Phoenix Contact MC 1,5/3-ST-3,5
Input voltage	4.5 VDC to 5.5 VDC or 10.8 VDC to 26.4 VDC
Power requirements	Max. 7 W (depending on the camera model)
FPD-Link III deserializer chip	Texas Instruments DS90UB954-Q1
Supported embedded boards	- Auvidia JNX30 carrier board with NVIDIA Jetson Xavier NX SoM, connected via Alvium CSI-2 Adapter for Auvidia JNX30 Carrier Board (see note below) - NVIDIA Jetson AGX Orin DevKit via 19616 Adapter Board for NVIDIA Jetson AGX Orin DevKit (under development)
Supported cameras	Alvium FP3 STP
Supported HDS STP cables for camera connections	Allied Vision 184205 18406
Supported FPC cables	Allied Vision 12316, 12317, 12318, 18947
Dimensions (Length × width × height [mm])	65.9 × 40 × 14.2 (incl. connectors)
Mass (deserialier board only)	<20 g
Operating temperature ^{1,2}	-20 °C to +50 °C
Storage temperature	-20 °C to +70 °C
Relative humidity	0% to 80% (non-condensing)
¹ For personal protection against burns according to section 9.3 IEC 62368-1	
² If enclosed in a housing, ensure that the component temperatures of U4 and L3 do not exceed 105 °C. See Figure 5 on page 32.	

Table 5: Deserializer Board FPD-Link III STP to CSI-2 specifications overview



Specifications of the deserializer chip

This deserializer board incorporates the FPD-Link III deserializer chip Texas Instruments DS90UB954-Q1. For specifications, see www.ti.com.



Alvium CSI-2 Adapter for Auvidia JNX30 Carrier Board

The 38373 Alvium CSI-2 Adapter for Auvidia JNX30 Carrier Board is manufactured and offered by Auvidia. For information, see <https://auvidia.eu>.

PCB and PCBA number

The PCB number is printed to the FPC connector side as shown in [Figure 4](#). The PCBA number is printed on the label of the shipping bag.

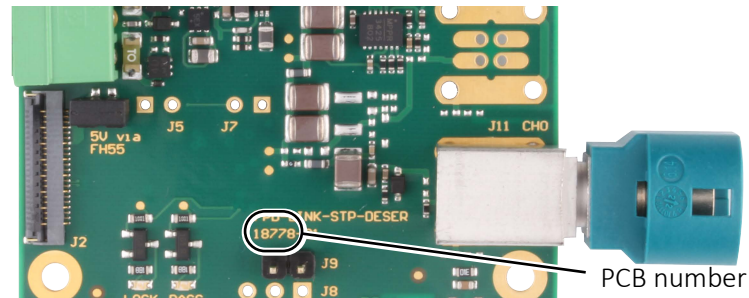


Figure 4: PCB and PCBA number on deserializer boards

Technical drawing

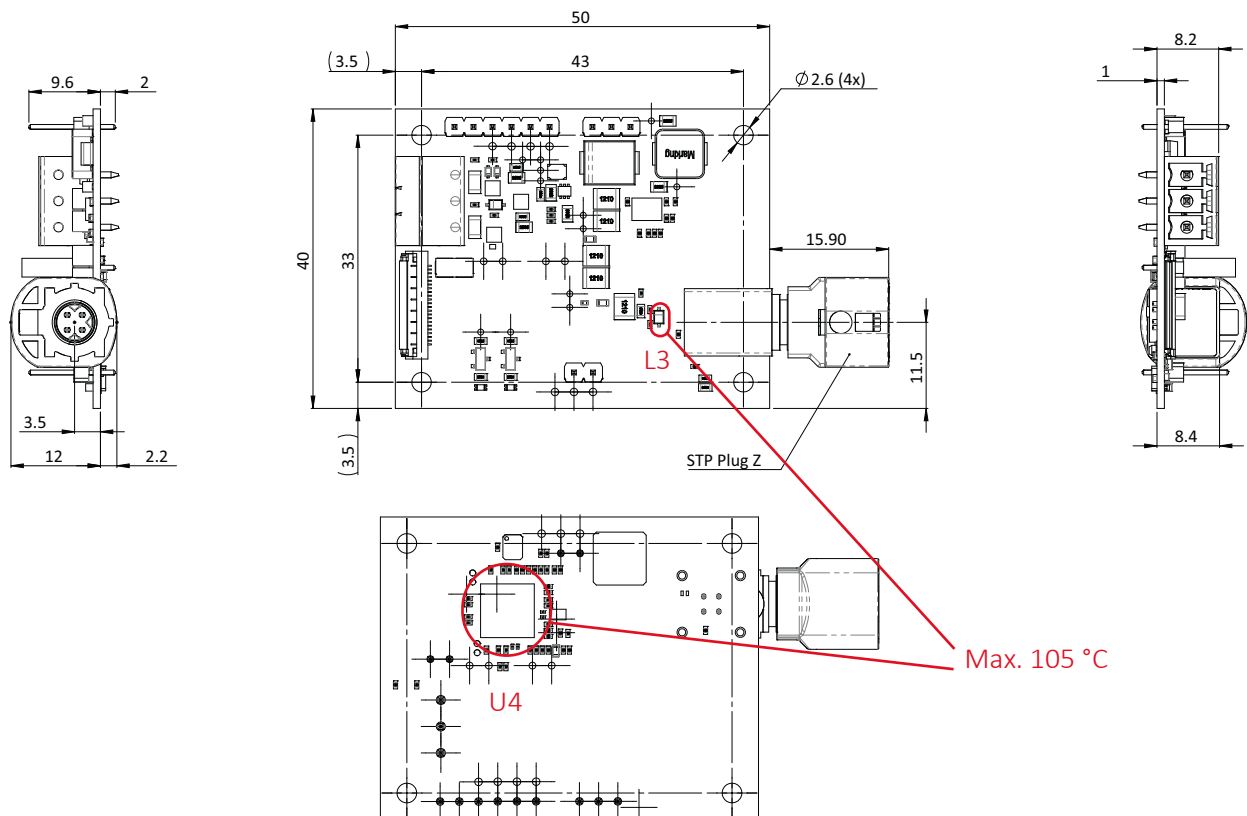


Figure 5: Deserializer Board FPD-Link III STP to CSI-2 dimensions and PCB layout

Power circuits

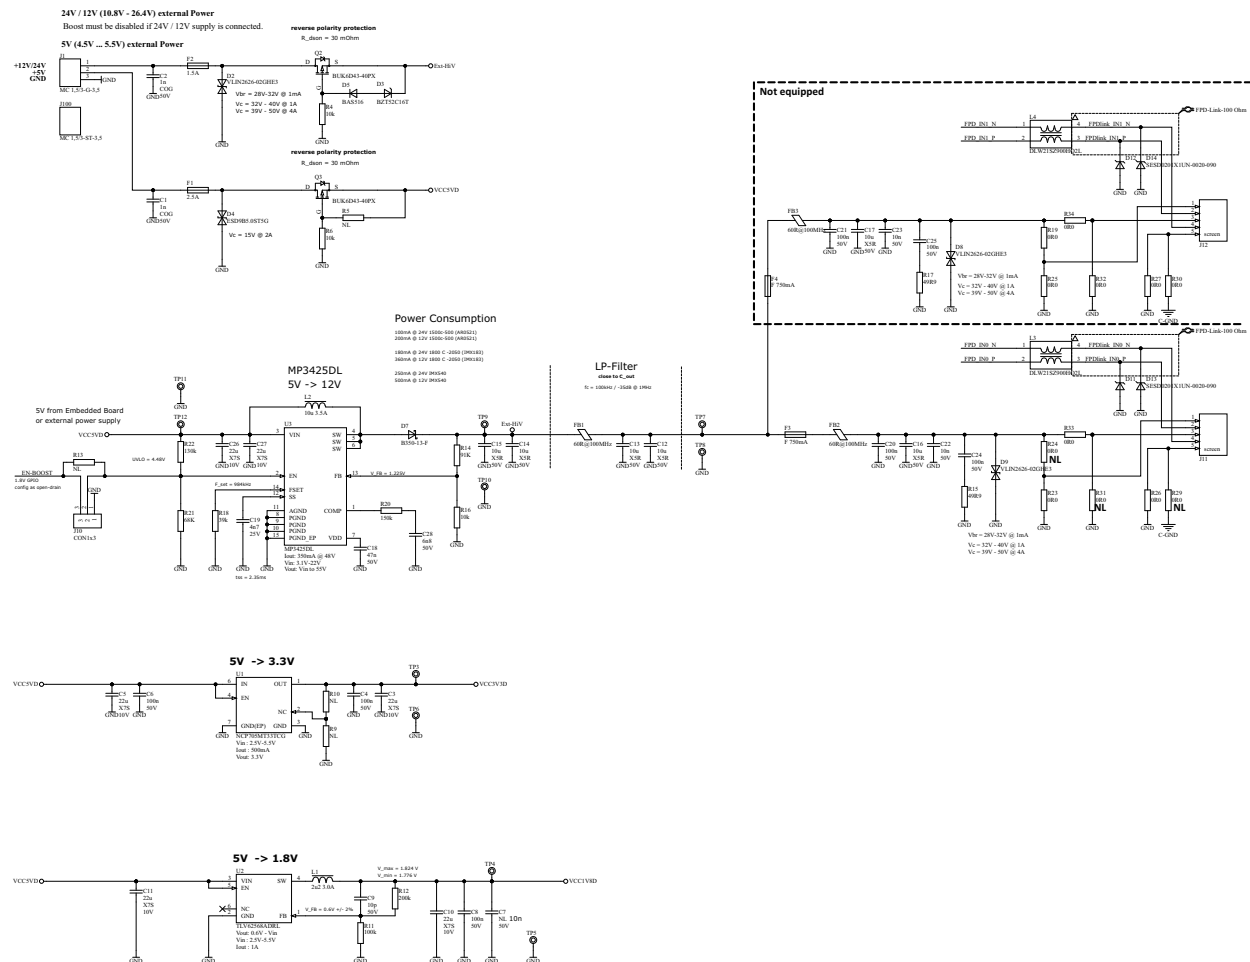


Figure 7: Deserializer Board FPD-Link III STP to CSI-2 electronic schematics, part 2

STP connector pin assignment

Signal lines on Alvium FP3 STP cameras are connected as follows.



NOTICE

Damage to the camera and connected peripherals

If Alvium FP3 STP cameras are operated with incompatible cables, cameras and connected peripherals can be damaged.

- We recommend you to use only STP cables and deserializers by Allied Vision.
- If you want to use third party accessories, observe [HSD STP connector pin assignment on Alvium FP3 STP cameras \(left\)](#) and on [Deserializer Board FPD-Link III STP to CSI-2 \(right\)](#) for Alvium FP3 STP cameras and Allied Vision's deserializers shown below.

	Description
A	Rosenberger D4S12H-40MA5-Z HSD STP connector
B	I/O connector
C	LED

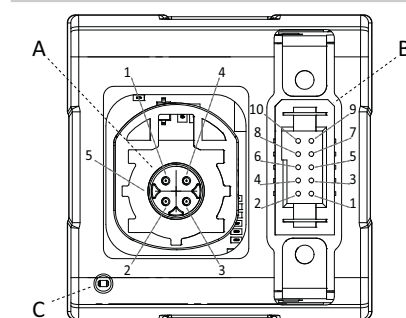


Table 6: STP models, back panel of the camera

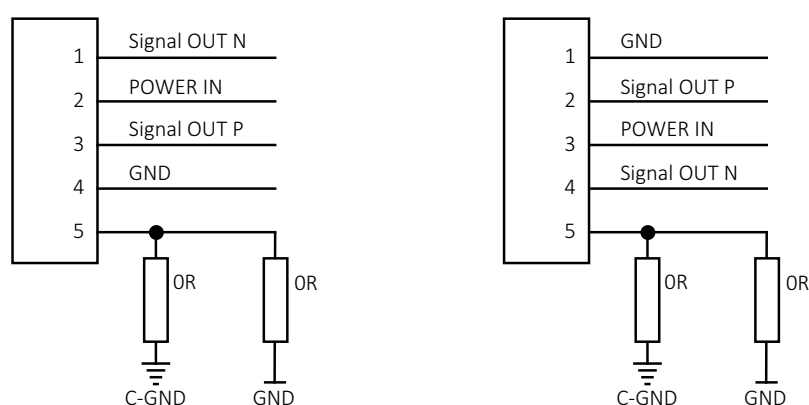


Figure 8: HSD STP connector pin assignment on Alvium FP3 STP cameras (left) and on Deserializer Board FPD-Link III STP to CSI-2 (right)

Setting up deserializer boards



This chapter includes basic instructions on cable connectors:

Connecting HSD STP cables	37
Connecting FPC cables	39

Followed by instructions for:

Mounting deserializer boards	41
Connecting components to each other	41
Connecting power	42

Connecting HSD STP cables

The robust HSD STP connectors are optimized for one-time plugging in the automotive industry. Unplugging cable connectors is uncomfortable, which may damage the corresponding devices. Please follow the instructions in this section.



NOTICE

Damage to the camera and connected peripherals

If Alvium FP3 STP cameras are operated with incompatible cables, cameras and connected peripherals can be damaged.

- We recommend you to use only STP cables by Allied Vision.
- If you want to use third party STP cables, observe [STP connector pin assignment](#) on page 35 for Alvium FP3 STP cameras.



NOTICE

Damage to cameras and connected peripherals

If HSD STP connectors are exposed to excessive stress, they can break off from the corresponding device.

- Secure STP cables at maximum 200 mm off the connected device.
- Follow the instructions below for HSD STP cables.

HSD STP cable-side connectors

[Figure 9](#) shows the latch of the locking mechanism of the HSD STP cable-side connectors in unlocked position (schematics):

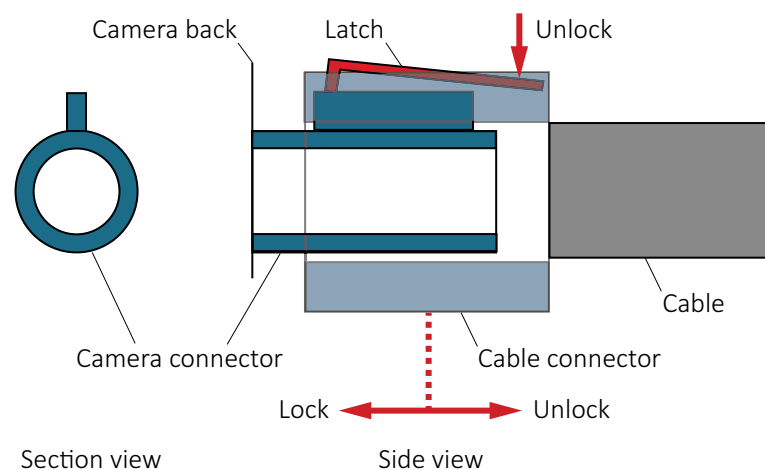


Figure 9: HSD STP cable-side connector: Locking mechanism

The cable-side connector has a locking mechanism that must be engaged for safe connection. To unplug the cable-side connector, the lever must be **pressed all the time while** the cable is pulled off the camera connector. Otherwise, the device-side connector can be torn off the device.

Instructions for connecting

1. Grab the device (the camera in this example) with one hand and the cable-side connector with the other hand.
2. Align the groove (b) of the cable-side connector with the notch (a) of the device's connector.

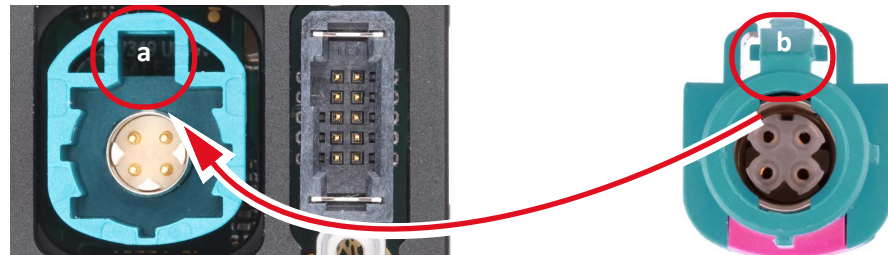


Figure 10: HSD STP connectors on devices (left) and on cables (right)

3. Push the cable-side connector over the device's connector until it clicks.
The device is connected properly.

Instructions for disconnecting

1. Grab the device with one hand and the cable-side connector with the other hand.
2. With your fingernail, press down the latch (c) of the cable-side connector.



NOTICE

Damage to cameras and connected peripherals

If HSD STP connectors are exposed to excessive stress, they can break off from devices.

Keep the latch (c) pressed down until the cable has been completely disconnected from the device.

3. **Keeping the latch (c) pressed down**, pull the cable-side connector off the device. You may slightly rotate and tilt the cable-side connector against the device to reduce friction.

The camera is disconnected.



Figure 11: Pressing down the latch (c) of the HSD STP connector

Connecting FPC cables

Figure 12 shows how the FPC cable connects to the FPC connector.

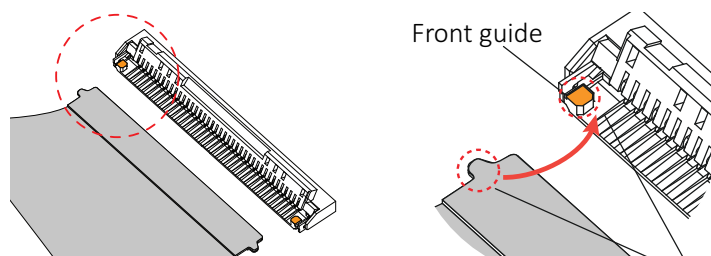


Figure 12: FPC cable and FPC connector (open position)

1. Opening the FPC connector:
With your fingernail*, flip the actuator to open position at 105° to the PCB surface, see Figure 13.

*Or use a plastic tool, as metal tools can damage the actuator.

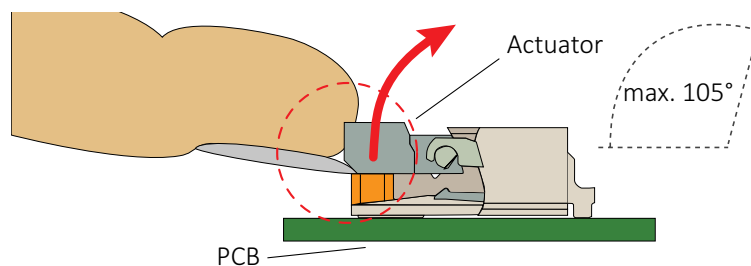


Figure 13: Opening the FPC connector



NOTICE

Damage to cameras or deserializer boards by reverse polarity

If deserializer boards or Alvium FP3 cameras are powered with reverse polarity, electronics is damaged.

- Before connecting camera power, see [Electronic schematics](#) on page 33.
- Connect the cable as shown in this section.

Embedded board
or adapter board



Deserializer board

Figure 14: FPC cable and data flow direction

2. **Ensuring proper cable orientation between devices to be connected**, take the FPC cable with conductors facing the FPC connector conductors (see [Figure 15](#) on page 40).

3. Inserting the FPC cable:
At a horizontal angle of 90° to the connector's rear (see [Figure 15](#)) and at a vertical angle of 12° to the PCB (see [Figure 16](#)), slowly insert the FPC cable into the actuator...

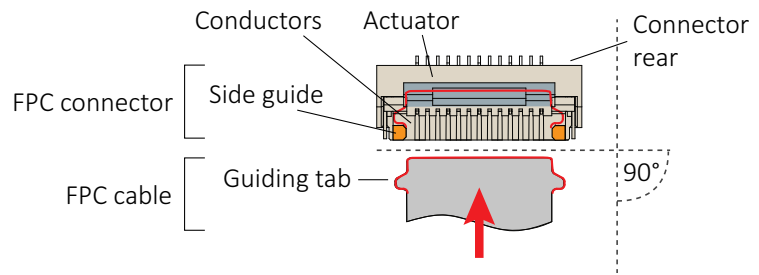


Figure 15: FPC cable and FPC connector

4. ...until cable guiding tabs are caught between connector rear and side guides (see [Figure 15](#)). Pull the cable slightly to ensure guiding tabs are properly engaged.
5. Holding the FPC cable in position, flap down the actuator to closed position (see [Figure 16](#)).

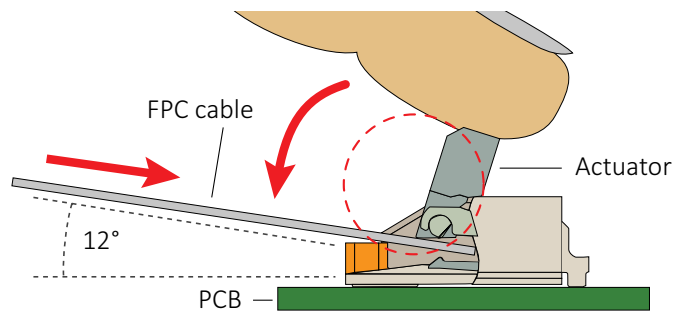


Figure 16: Engaging the FPC cable in the FPC connector

Mounting deserializer boards



CAUTION

Burns to the skin

Electrical components get hot during operation.

Before operation, include deserializer boards in housings that disable any contact to hot components.



NOTICE

Damage to electronics

- Disconnect all power supplies before installing deserializer boards.
- Reconnect power only after installation is complete.
- Mount the embedded boards, deserializer boards, and cameras on common bases for strain relief.

1. Mount the deserializer board to a mounting base using 4 M2.5 screws with washers.
2. Prepare strain relief for all cable connections as described in [Strain relief for all cable connections](#) on page 26.



NOTICE

Damage to cameras and connected peripherals

If HSD STP connectors are exposed to excessive stress, they can break off from devices. Hirose FH55 FPC connectors can be damaged easily.

- Secure cables at maximum 200 mm off the connected device, see [Strain relief for all cable connections](#) on page 26.
- See [Connecting HSD STP cables](#) on page 37.
- See [Connecting FPC cables](#) on page 39.

Connecting components to each other

For connecting cameras to deserializer boards, follow the instructions in [Connecting HSD STP cables](#) on page 37. For connecting deserializer boards to the host, follow the instructions in [Connecting FPC cables](#) on page 39.

Connecting power



NOTICE

Damage to power supplies

If power supplies do not provide sufficient current, they may be damaged.

Ensure external power supplies or embedded boards provide minimum 1500 mA for 5 VDC or minimum 600 mA for 12 VDC correspondingly.

1. Ensure all power supplies are disconnected from the mains power.
2. Set the jumpers for Step a and Step b as shown in [Figure 17](#).
3. For power over the **FPC connector**, continue with 4.
For power over the **terminal power connector**, connect the Phoenix Contact MC 1,5/3-ST-3,5 connector as shown in [Figure 17](#) for Step c.

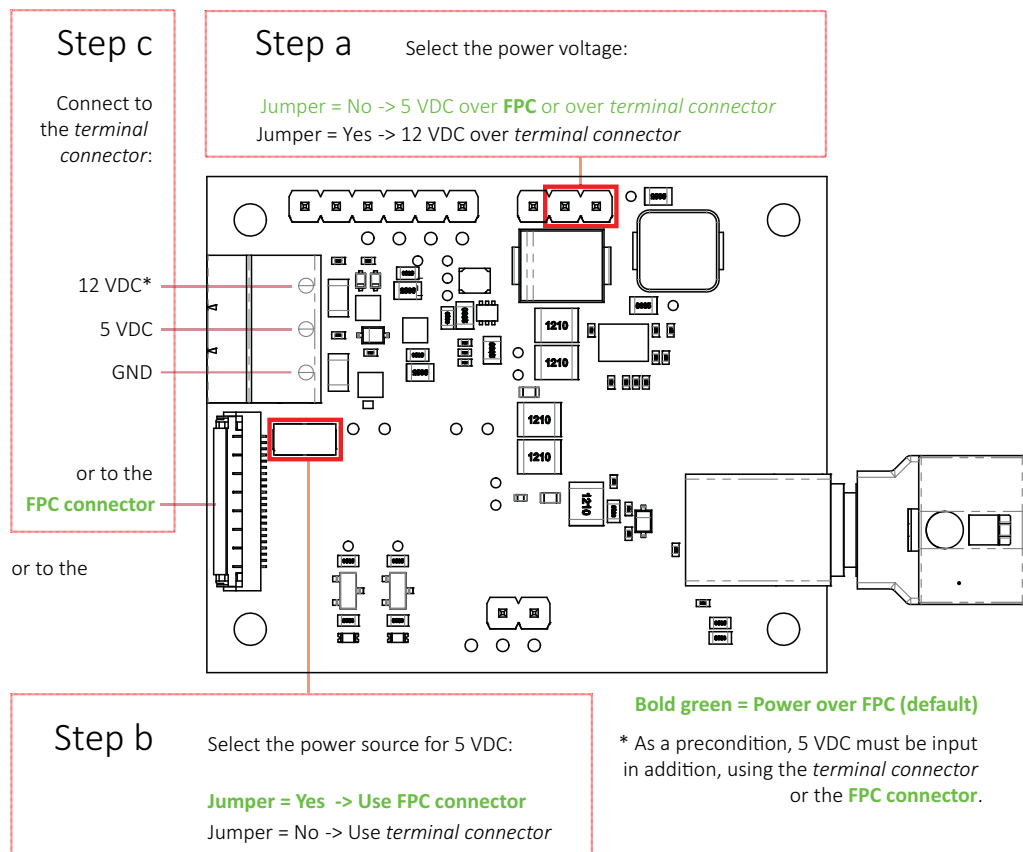


Figure 17: Connections and jumper settings for power supply

4. Connect the power supplies to the mains power.
5. Power and boot the embedded system.

Your vision application is ready for first operation.